SC8200 Series

# Vacuum Cleaner
## user manual

Planet First 100% Recycled Paper

**This manual is made with 100% recycled paper.**

✻ Before operating this unit, please read the instructions carefully.
✻ For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

Code No. DJ68-00598D REV(0.1)

# Safety information

## SAFETY INFORMATION

WARNING

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.

WARNING

- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

### CAUTION/WARNING SYMBOLS USED

| | |
|---|---|
| WARNING | Indicates that a danger of death or serious injury exists. |
| CAUTION | Indicates that a risk of personal injury or material damage exists. |

### OTHER SYMBOLS USED

| | |
|---|---|
| | Represents something you must NOT do. |
| | Represents something you must follow. |
| | Indicates that you must disconnect the power plug from the socket. |

# Safety information

## IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING** : Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.
3. Do not use the vacuum cleaner without a dust bag. Change the dust bag before it is full in order to maintain the best efficiency.
4. Slide to the Stop(or Min)position before inserting a plug into the electrical outlet.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts.
   Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
11. The use of an extension cord is not recommended.
12. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Don't carry the vacuum cleaner by holding the hose.
    Use the handle on the vacuum cleaner set.
15. Unplug the cleaner when not in use. Turn off the power switch before unplugging.

**WARNING** This vacuum cleaner is designed for domestic household use only. Do not use this vacuum cleaner to clean building waste or debris. Do not use this vacuum cleaner with any of the filters removed as this could cause damage to the internal components and void your warranty.

# Contents


**ASSEMBLING THE CLEANER** 05

05 Assembling the cleaner

**OPERATING THE CLEANER** 06

06 ON/OFF Switch
06 Power Cord
06 Power-Control

**MAINTAIN TOOLS AND FILTER** 08

08 Using accessory
09 Maintain floor tools
11 Cleaning the dust pack
12 Change the dust bag
12 Cleaning inlet filter
12 Cleaning the outlet filter
13 Cleaning the cyclone filter(option)
14 Change the battery (optional)

**TROUBLESHOOTING** 15

15 Troubleshooting

# Assembling the cleaner

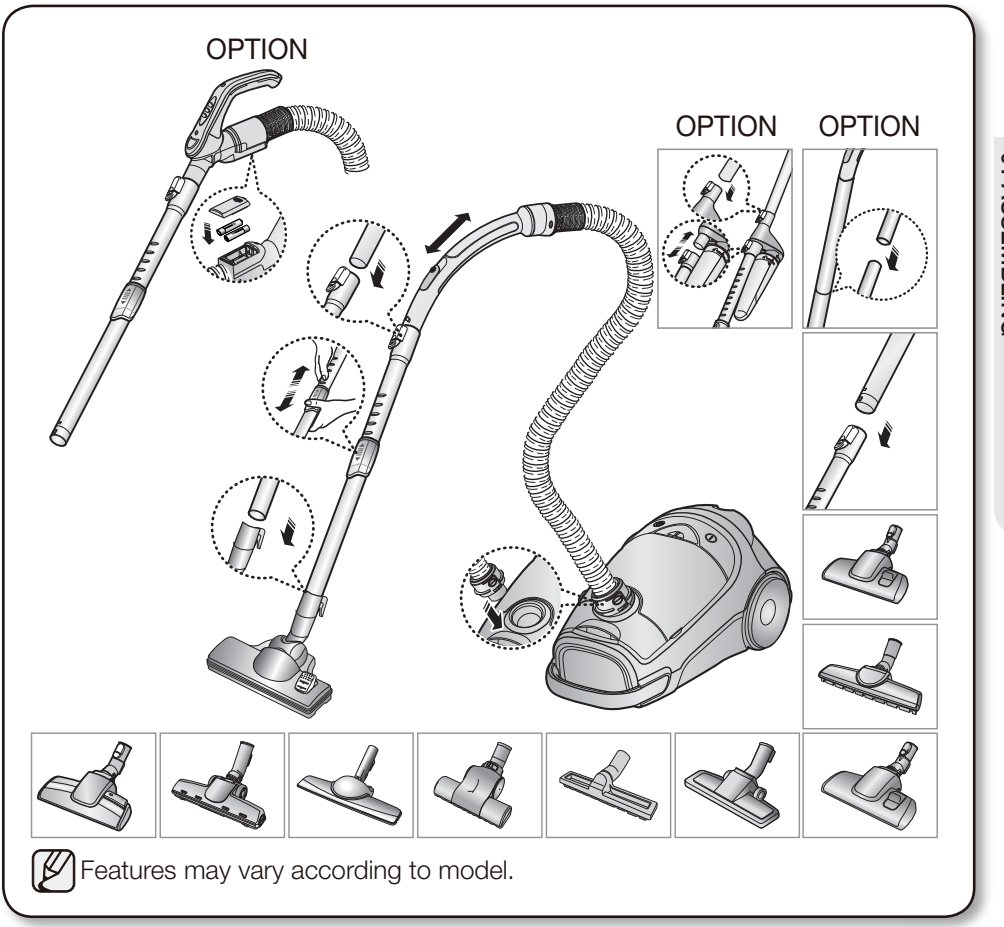


Features may vary according to model.

• For storage, park the floor nozzle.

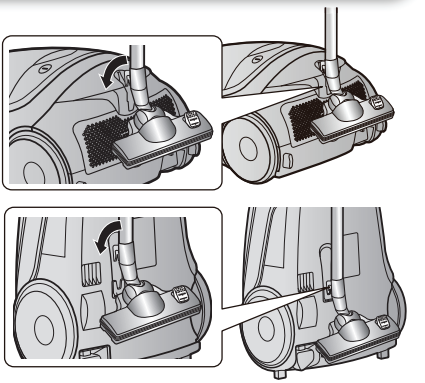

# Operating the cleaner

## ON/OFF SWITCH

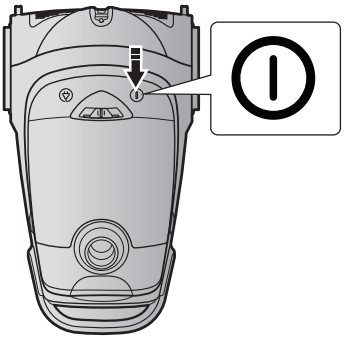

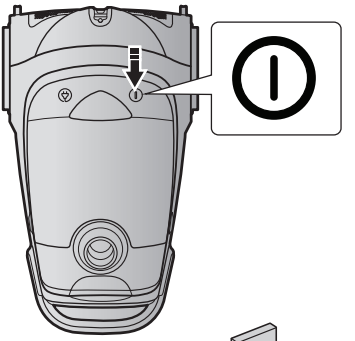

CAUTION

- When removing the plug from the electrical outlet, grasp the plug, not the cord.

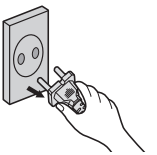

## POWER CORD

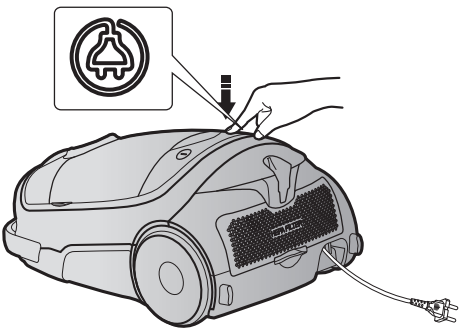

## POWER-CONTROL

### BODY-CONTROL TYPE / ON/OFF TYPE

- **HOSE**

  To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

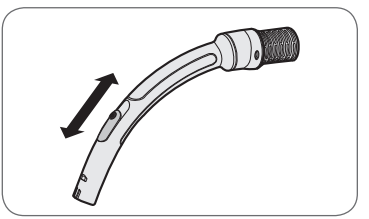

# Operating the cleaner

- **BODY (BODY-CONTROL TYPE ONLY)**

  **MIN** = For delicate surface e.g. net curtains.
  **MAX** = For hard floors and heavily soiled carpets.

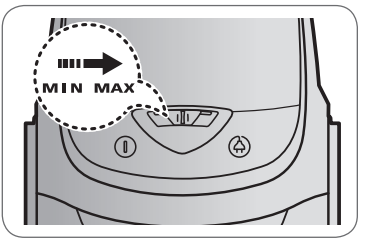




## HANDLE CONTROL TYPE

- **HOSE**

  Vacuum cleaner MODE (**MIN/MID, MAX**)
  Press the MODE button repeatedly to select the correct mode.
  (ON) MIN → MID → MAX

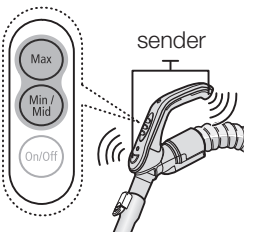


Handle Control
The cleaner is controlled by using infrared signals.

## USING ACCESSORY

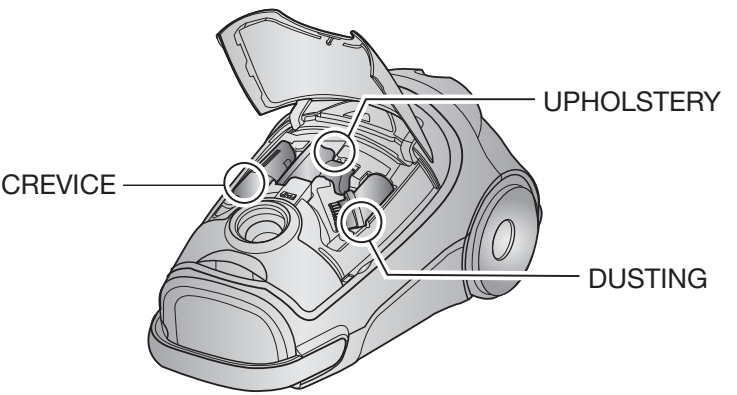

# Maintain tools and filter

## USING ACCESORY

### ACCESSORY

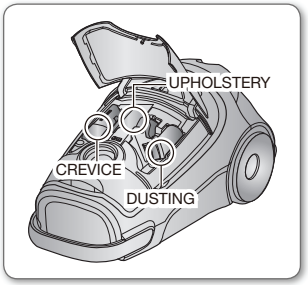


- Crevice tool for radiators, crevices, corners, between cushions.

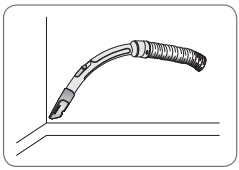

- Dusting brush for furniture. shelves, books, etc.

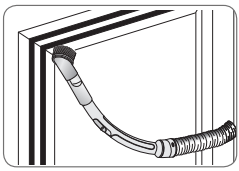

- Upholstery brush - for cushions and drapery.

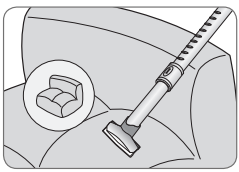

Press gently when using rotating brush to gain maximum cleaning. Too much pressure could cause the brush to stop rotating.

### PIPE

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

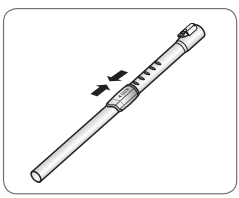

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

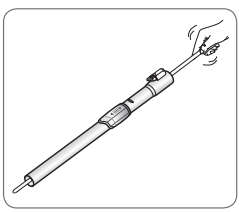

# Maintain tools and filter

## MAINTAIN FLOOR TOOLS

### 2-STEP BRUSH (OPTION)

- Adjust the inlet lever according to the floor surface.

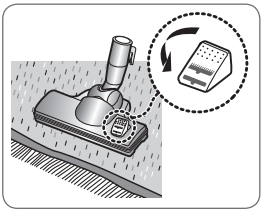

Carpet Cleaning

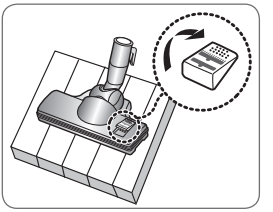

Floor Cleaning

- Remove waste matter completely if the inlet is blocked.

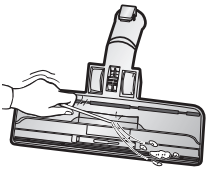

### 3 WAY BRUSH (OPTION)

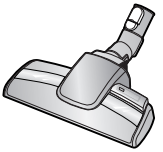

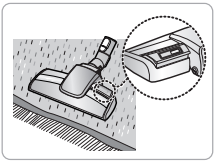

Carpet Cleaning

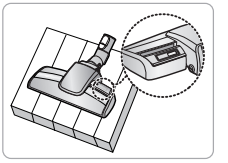

Floor Cleaning

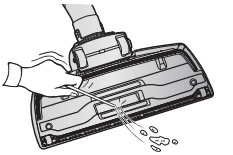

- Adjust the inlet lever according to the floor surface.
- Remove waste matter completely if the inlet is blocked.

### PET BRUSH (OPTION)

For improved pick-up of pet hair and fibre on carpets.
Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

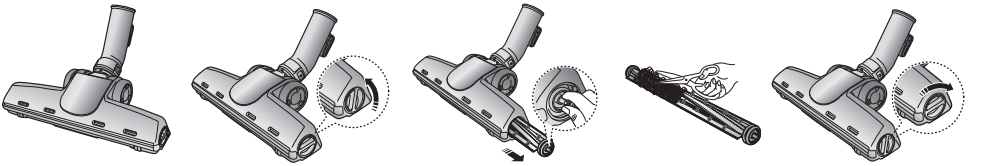

# Maintain tools and filter

## MINI TURBO BRUSH (OPTIONAL)

### - TO REPLACE BRUSHROLL

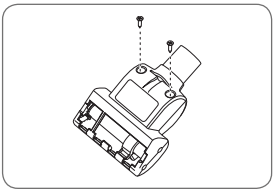

1. If a clog is present or debris is visible, unscrew the two screws on the back of the Mini turbo brush to remove the faceplate and clear any obstructions.

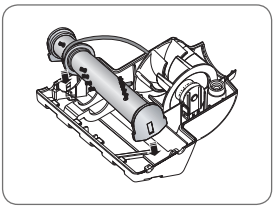

2. Inspect condition of brushroll.
   Replace brushroll if brushes are worn down.
   To remove brushroll, pull up and out of end slots in nozzle housing.
   Insert ends of brushroll into same slots to replace.

   Inspect belt to ensure that it is in good condition. If belt is broken or cracked, replace belt according to To Replace Belt instructions.

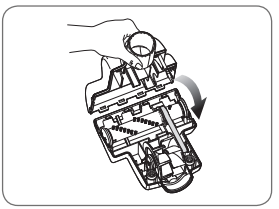

3. Using at MAX.
   Press the MAX button to operate the vacuum at maximum intake.

### - TO REPLACE BELT

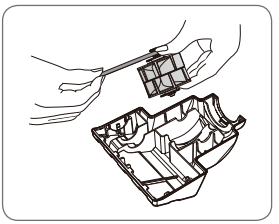

1. Remove bottom plate.
   See figure in To Replace Brushroll instructions.
2. Loop one end of new belt around shaft of pulley.
3. Loop other end of belt around designated area for it on brushroll. Insert brushroll into slots in nozzle housing.
   See figure in To Replace Brushroll instructions.

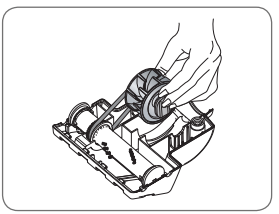

4. Fit Mini turbo brush back together as described in To Replace Brushroll instructions.

# Maintain tools and filter

## CHECK FILTER INDICATOR

### When to clean the dust pack

- If the “Filter Check” indicator turns to red color while you are cleaning, the dust bag requires replacement.

★ If the “Filter Check” indicator continues to display red color even after having changed bag into new one, turn the cleaner off and check if there is any clogging in the hose,tube,floor nozzle,or on the inlet/outlet filter.

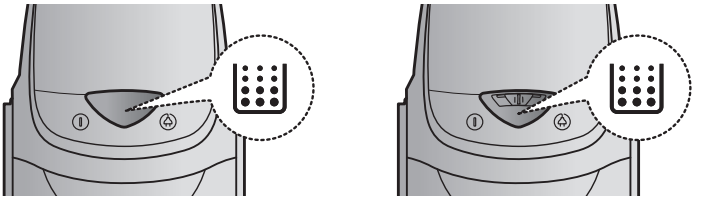

- Turn the vacuum power to ‘MAX’.

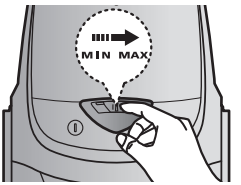


Body Control

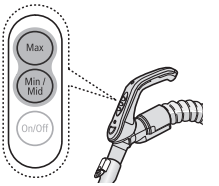


Handle Control

- If the filter check indicator turns red with the inlet floating 10cm above flat floor, clean the dust pack.

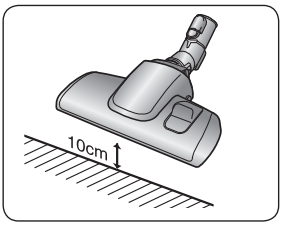


★ • When suction is noticeably reduced continuously, please cleaning the dust pack.

# Maintain tools and filter

## CHANGING THE DUST BAG

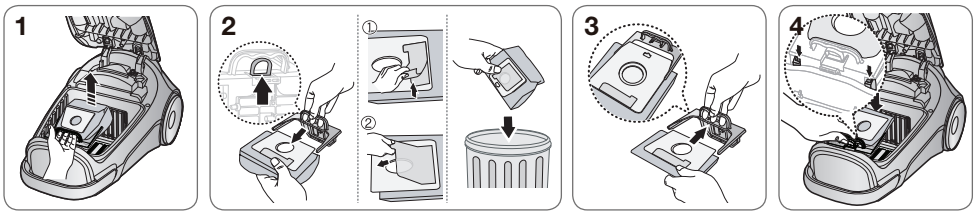


### OPTIONAL

- **For Cloth Bag**
  After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

You can purchase dust bags in the shops where you bought this vacuum cleaner. paper bag can be used as you prefer (Paper-bag : VP-90)

## CLEANING INLET FILTER

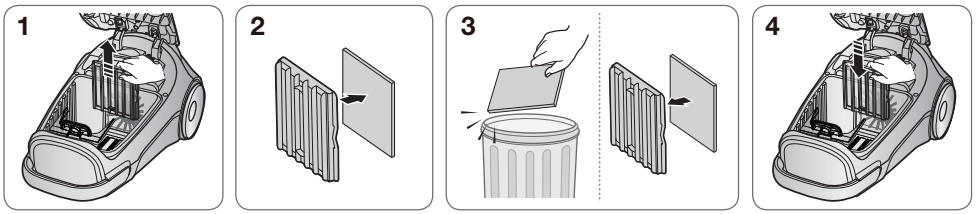


## CLEANING THE OUTLET FILTER

1. Press the fixed frame part at the back of the main body to remove.

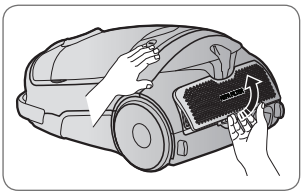

# Maintain tools and filter

2. Pull out the Filter using the tab. Clean the Filter.

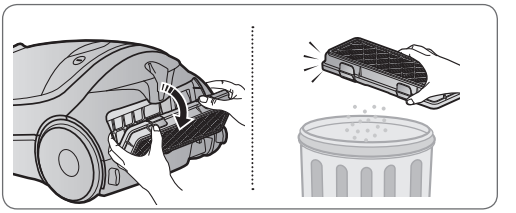

3. Put the Filter into the main body until you hear a 'click' sound.

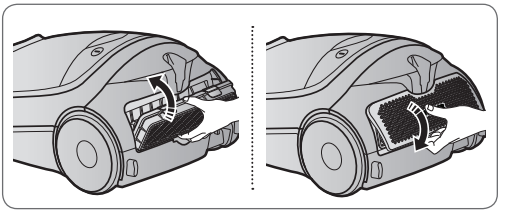



## CLEANING THE CYCLONE FILTER(OPTION)

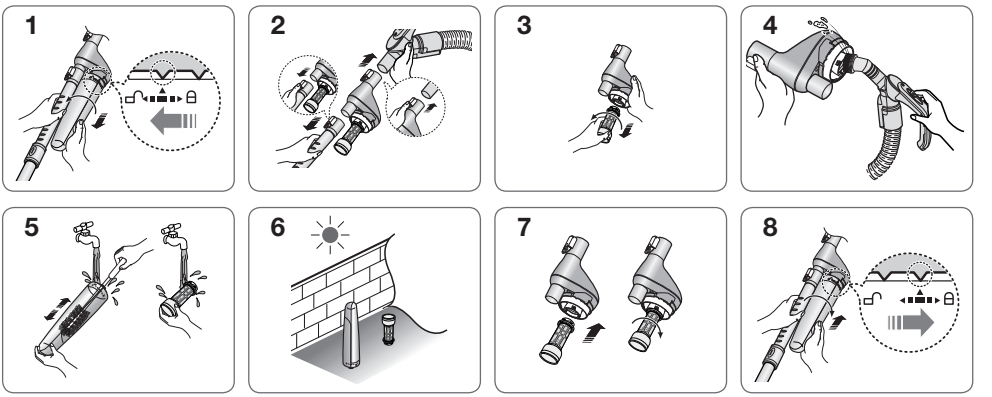


• Use Cyclone Filter for the best efficiency.

# Maintain tools and filter

## CHANGE THE BATTERY (OPTIONAL)

1. When the vacuum cleaner dows not work, replace the batteries. If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AA.

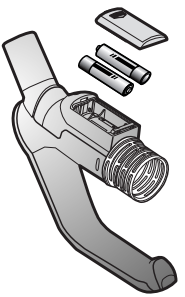

**WARNING**

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+), (-) poles
4. Dispose of the batteries property.

**BATTERY TYPE : AA Size**

# Troubleshooting

| PROBLEM | SOLUTION |
|---|---|
| Motor does not start | • Check cable, pulg and socket.<br>• Leave to cool. |
| Suction force is gradually decreasing | • Check for blockage and remove. |
| Cord does not rewind fully | • Pull the cord out 2-3m and push down the cord rewind button. |
| Vacuum cleaner does not pick up dirt | • Check hose and replace if required. |
| Low or decreasing suction | • Please check filter and, if required, clean as illustrated in the instructions. if filters are out of condition change them to new ones. |

SAMSUNG

سلسلة SC8200

# المكنسة الكهربائية
# دليل المستخدم

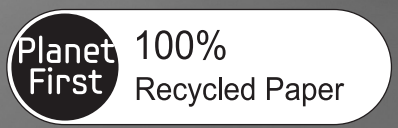


تم إنتاج هذا الدليل باستخدام ورق مُعاد تدويره بنسبة ١٠٠٪.

العربية

* قبل الشروع في تشغيل هذه الوحدة، الرجاء قراءة الإرشادات بعناية.
* للاستخدام الداخلي فقط.

## إمكانيات هائلة

شكرًا لشرائك أحد منتجات Samsung.
**للحصول على مستوى كامل من الخدمة،**
**الرجاء تسجيل المنتج لديك على الموقع**
**www.samsung.com/register**

SAMSUNG

Code No. DJ68-00598D REV(0.1)

# معلومات السلامة

## معلومات السلامة

• قبل تشغيل الجهاز، يُرجى قراءة هذا الدليل بعناية والاحتفاظ به للرجوع إليه فيما بعد.

• نظراً لأن إرشادات التشغيل التالية تغطي طرزاً متنوعة، فقد تختلف خصائص المكنسة الكهربائية التي اشتريتها اختلافًا طفيفًا عما هو موضح في هذا الدليل.

### رموز التنبيهات/التحذيرات المستخدمة

| | |
|---|---|
| | يشير إلى وجود خطر قد يؤدي إلى حدوث حالة وفاة أو إصابة خطيرة. |
| | يشير إلى وجود خطر حدوث إصابة شخصية أو تلف لمادةٍ ما. |

### الرموز الأخرى المستخدمة

| | |
|---|---|
| | يشير إلى شيء يجب ألا تفعله. |
| | يشير إلى شيء يجب اتباعه. |
| | يشير إلى أنه يجب عليك نزع قابس التيار الكهربي من المقبس. |

# معلومات السلامة

## احتياطات السلامة الهامة

١. اقرأ جميع الإرشادات بعناية. قبل الشروع في التشغيل، تأكد أن الجهد الكهربائي لمصدر الكهرباء هو نفسه الموضح على لوحة التقدير الموجودة بالجزء السفلي من المكنسة.

٢. **تحذير**: لا تستخدم المكنسة الكهربائية عندما تكون السجادة أو الأرضية مبتلة.
تجنب استخدامها لشفط المياه.

٣. لا تستخدم المكنسة الكهربائية دون كيس الأتربة. وقم بتغييره قبل امتلائه للحفاظ على كفاءته.

٤. انتقل إلى الوضع Stop (إيقاف) (أو Min (الحد الأدنى)) قبل توصيل القابس بمأخذ التيار الكهربي.

٥. لا تستخدم المكنسة الكهربائية لالتقاط أعواد الثقاب أو الرماد الساخن أو أعقاب السجائر.

احفظ المكنسة بعيدًا عن المواقد ومصادر الحرارة الأخرى. فقد تتسبب الحرارة في تلف الأجزاء البلاستيكية للوحدة وتغيير ألوانها.

٦. تجنب التقاط أجسام صلبة وحادة بالمكنسة، حيث قد تتسبب في تلف أجزاء المكنسة. لا تقف على أجزاء الخرطوم. ولا تضع جسمًا ثقيلاً على الخرطوم. لا تقم بسد منفذ الشفط أو الطرد.

٧. أوقف تشغيل المكنسة الكهربائية من المفتاح الموجود بالجهاز قبل فصل القابس من مأخذ التيار الكهربي. افصل القابس من مأخذ التيار الكهربي قبل تغيير كيس أو حاوية الأتربة. لتجنب حدوث تلف، الرجاء فصل القابس بجذبه وليس بسحب السلك.

٨. لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص (بما في ذلك الأطفال) من ذوي القدرات البدنية أو الحسية أو العقلية المحدودة أو غير الملمين بالخبرة والمعرفة المطلوبة إلا إذا تم ذلك تحت إشراف أو توجيه شخص مسئول عن الحفاظ على سلامتهم.

٩. ينبغي مراقبة الأطفال للتأكد من عدم عبثهم بالجهاز.

١٠. يجب فصل القابس من مأخذ التيار الكهربي قبل تنظيف الجهاز أو صيانته.

١١. لا يوصى باستخدام سلك توصيل.

١٢. إذا لم تعمل المكنسة على نحو سليم، قم بإيقاف تشغيل مورّد الطاقة واستشر وكيل الصيانة المعتمد.

١٣. في حالة تلف سلك التيار، يجب استبداله من قِبل الشركة المصنّعة أو وكيل الصيانة التابع لها أو أي فني صيانة مؤهل لتفادي التعرض لأي خطر.

١٤. لا تحمل المكنسة الكهربائية من خلال الإمساك بالخرطوم.
استخدم المقبض الموجود بالمكنسة الكهربائية.

١٥. افصل قابس المكنسة الكهربائية في حالة عدم استخدامها. أوقف تشغيل مفتاح الطاقة قبل فصل القابس.

تحذير

هذه المكنسة الكهربائية مصممة للاستخدام المنزلي المحلي فقط. لا تستخدم هذه المكنسة الكهربائية في تنظيف مخلفات أو حطام البناء. وتجنب استخدام هذه المكنسة الكهربائية في حالة إزالة أي من المرشحات، حيث أن ذلك قد يتسبب في حدوث تلف للمكونات الداخلية وإلغاء الضمان.

# المحتويات


تجميع المكنسة ٠٥

٠٥ تجميع المكنسة

تشغيل المكنسة ٠٦

٠٦ مفتاح التشغيل/إيقاف التشغيل
٠٦ سلك الطاقة
٠٦ التحكم في الطاقة

صيانة الأدوات والمرشحات ٠٨

٠٨ استخدام الملحق
٠٩ صيانة أدوات الأرضية
١١ تنظيف حاوية الأتربة
١٢ تغيير كيس الأتربة
١٢ تنظيف مدخل المرشح
١٢ تنظيف مخرج المرشح
١٣ تنظيف مرشح السيكلون (اختياري)
١٤ تغيير البطارية (اختياري)

استكشاف الأخطاء وإصلاحها ١٥

١٥ استكشاف الأخطاء وإصلاحها

# تجميع المكنسة

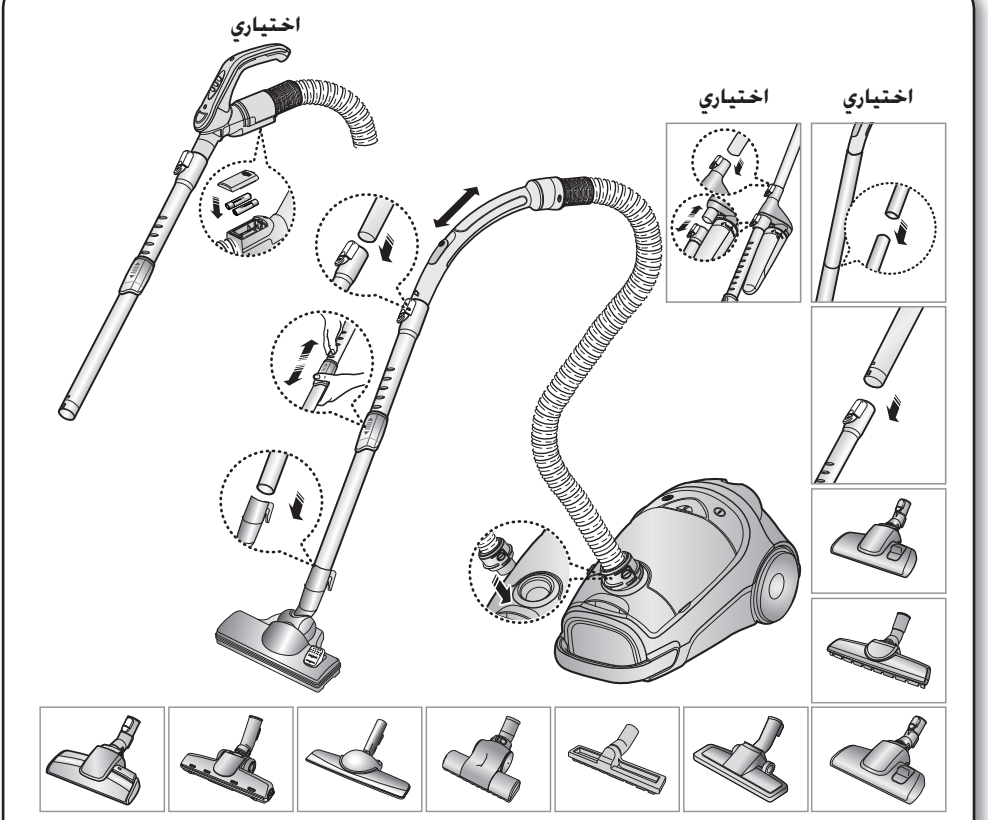


قد تختلف الميزات حسب الطراز.

• للتخزين، قم بتثبيت خرطوم الأرضية.

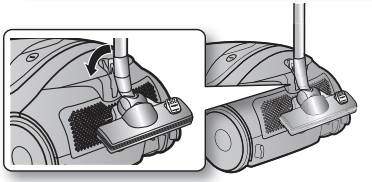

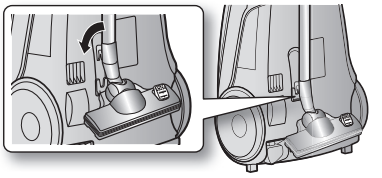

# تشغيل المكنسة

## مفتاح التشغيل/إيقاف التشغيل

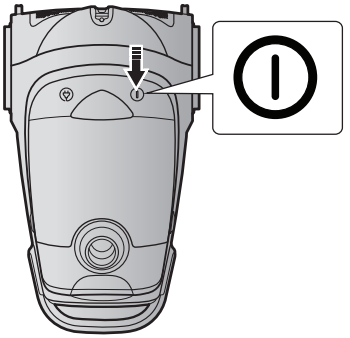

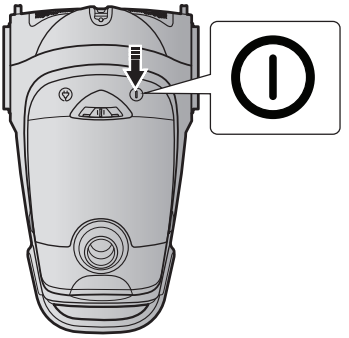

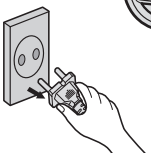

تنبيه

• عند فصل القابس من aمأخذ التيار الكهربي، اسحب القابس وليس السلك.

## سلك الطاقة

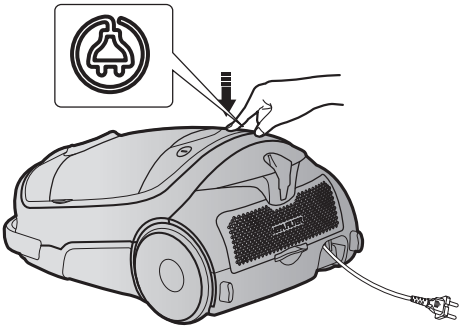

## التحكم في الطاقة

## نوع التحكم في الجسم / نوع التشغيل/إيقاف التشغيل

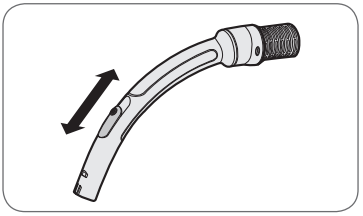

• الخرطوم

لتقليل قوة الشفط لتنظيف الستائر والسجاجيد الصغيرة والأقمشة الخفيفة الأخرى، اسحب صنبور الهواء حتى تنكشف الفتحة.

# تشغيل المكنسة

- **الجسم (نوع التحكم في الجسم فقط)**

**MIN (الحد الأدنى)** = للسطح الناعم مثل الستائر الشبكية.
**MAX (الحد الأقصى)** = للأرضيات الصلبة والسجاد شديد الاتساخ.

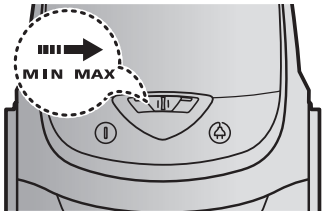


## نوع التحكم في المقبض

- **الخرطوم**

أوضاع المكنسة الكهربائية (MIN/MID (الحد الأدنى/الحد المتوسط) و MAX (الحد الأقصى))

اضغط على الزر MODE (الوضع) بشكل متكرر لتحديد الوضع المناسب.

(ON(تشغيل)) MIN (الحد الأدنى) ← MID (الحد المتوسط) ← MAX (الحد الأقصى)

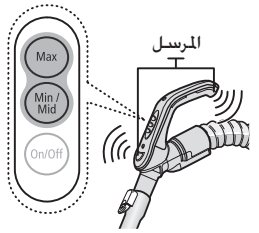


التحكم في المقبض
يتم التحكم بالمكنسة بواسطة إشارات الأشعة تحت الحمراء.

## استخدام الملحق

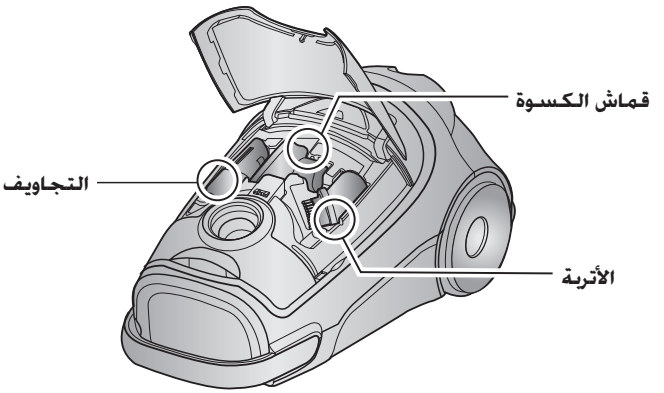

# صيانة الأدوات والمرشحات

## استخدام الملحق

### الملحق

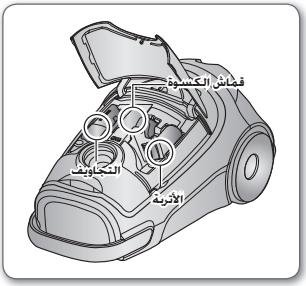


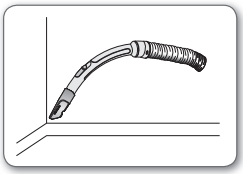

- أداة التجاويف للدفايات والتجاويف والأركان وبين الوسائد.

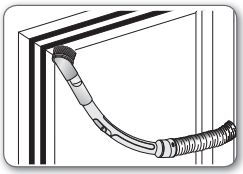

- فرشاة إزالة الأتربة للأثاث والأرفف والكتب وما إلى ذلك.

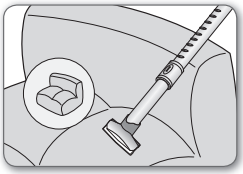

- فرشاة قماش الكسوة للوسائد والستائر.

اضغط برفق عند استخدام الفرشاة الدوارة لضمان الحصول على أفضل مستوى للتنظيف.
قد يؤدي الضغط الشديد إلى توقف تدوير الفرشاة.

### أنبوبة

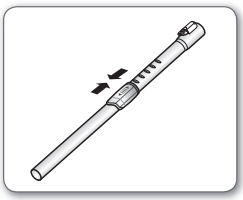

- **قم بضبط طول الأنبوب المتداخل عن طريق تحريك زر التحكم في الطول الموجود في منتصف الأنبوب المتداخل من الخلف والأمام.**

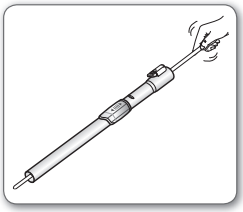

- **لفحص الانسدادات، افصل الأنبوب المتداخل وقم بضبطه على طول قصير. حيث يسمح ذلك بتنظيف المخلفات العالقة بالأنبوب.**

# صيانة الأدوات والمرشحات

## صيانة أدوات الأرضية

### ٢-الفرشاة الثابتة (اختيارية)

• قم بضبط ذراع المدخل وفقًا لسطح الأرضية.

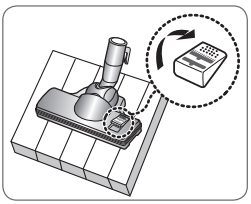

تنظيف السجاد

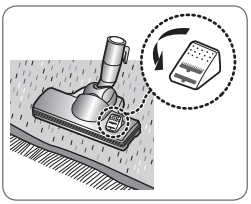

تنظيف الأرضية

• قم بتنظيف أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

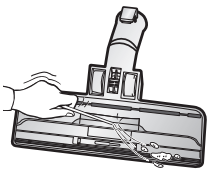

### ٣ الفرشاة السريعة (اختيارية)

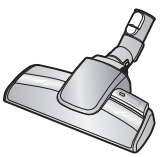

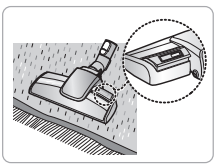

تنظيف السجاد

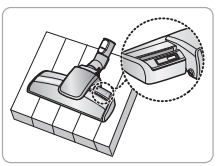

تنظيف الأرضية

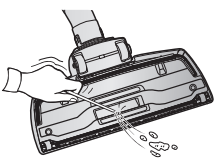

• قم بضبط ذراع المدخل وفقًا لسطح الأرضية.
• قم تنظيف أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

## فرشاة تنظيف الشعر (اختيارية)

لإزالة شعر الحيوانات والأنسجة الموجودة على السجاد بطريقة مميزة.
يؤدي استخدام المكنسة الكهربائية بشكل متكرر في إزالة الشعر أو فراء الحيوانات الأليفة إلى سقوط العجلة الدوارة نتيجة لحدوث تشابك حول الأسطوانة. في هذه الحالة، قم بتنظيف الأسطوانة بعناية.

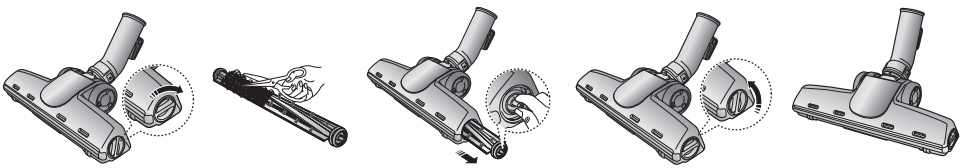

# صيانة الأدوات والمرشحات

## فرشاة التربو الصغيرة (اختيارية)

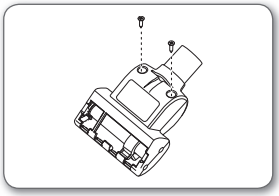

- **لاستبدال أسطوانة الفرشاة**

١. في حالة وجود انسداد أو مخلفات مرئية، قم بفك المسمارين بالجزء الخلفي من فرشاة التربو "الصغيرة" لإزالة الغطاء والتخلص من أي عوائق.

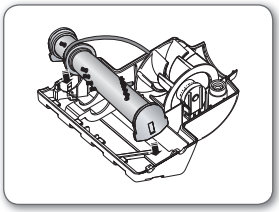

٢. افحص حالة أسطوانة الفرشاة.
استبدل أسطوانة الفرشاة إذا كانت بالية.
لفك أسطوانة الفرشاة، اسحبها لأعلى ثم للخارج من نهاية الفتحات الموجودة في تجويف الخرطوم.
أدخل نهايات أسطوانة الفرشاة في الفتحات نفسها للاستبدال.

افحص السَّير للتأكد أنه بحالة جيدة.
إذا كان السير مقطوعًا أو به شقوق، استبدله وفقًا لإرشادات استبدال السَّير.

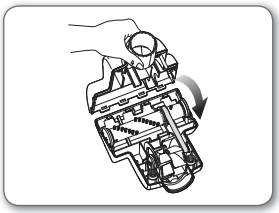

٣. الاستخدام في الوضع MAX (الحد الأقصى).
اضغط على الزر MAX (الحد الأقصى) لتشغيل المكنسة الكهربائية بحد أقصى للامتصاص.

- **لاستبدال السير**

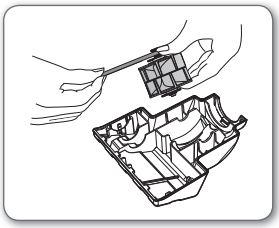

١. قم بفك اللوحة السفلية.
راجع الشكل الموجود في إرشادات "لاستبدال أسطوانة الفرشاة".

٢. قم بلف أحد طرفي السَّير الجديد حول عمود دوران البكرة.

٣. قم بلف الطرف الآخر للسَّير حول المنطقة المحددة له على أسطوانة الفرشاة.
وأدخل أسطوانة الفرشاة في فتحات تجويف الخرطوم.
راجع الشكل الموجود في إرشادات "لاستبدال أسطوانة الفرشاة".

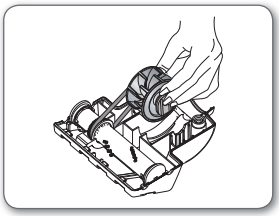

٤. ثبت فرشاة التربو "الصغيرة" بشكل صحيح كما هو موضح في إرشادات استبدال أسطوانة الفرشاة.

# صيانة الأدوات والمرشحات

## فحص مؤشر المرشح

### متى ينبغي تنظيف حاوية الأتربة؟

- في حالة تحول مؤشر "فحص المرشح" إلى اللون الأحمر أثناء التنظيف، يلزم استبدال كيس الأتربة.

إذا استمر مؤشر"فحص المرشح" في عرض اللون الأحمر حتى بعد تغيير الكيس بآخر جديدة، قم بإيقاف تشغيل المكنسة وافحص ما إذا كانت هناك أي مخلفات عالقة بالخرطوم أو الأنبوب أو خرطوم الأرضية أو مرشح المدخل/المخرج.

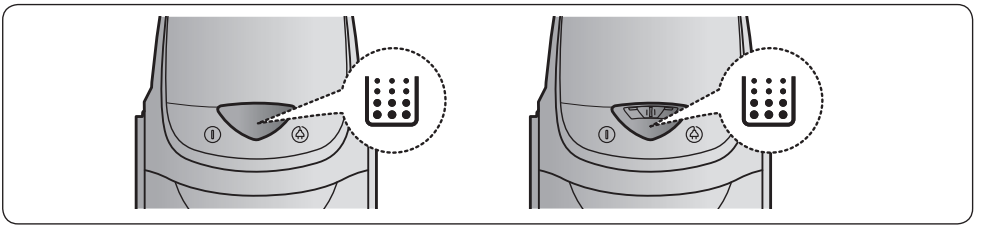

• قم بضبط طاقة المكنسة الكهربائية على "MAX (الحد الأقصى)".

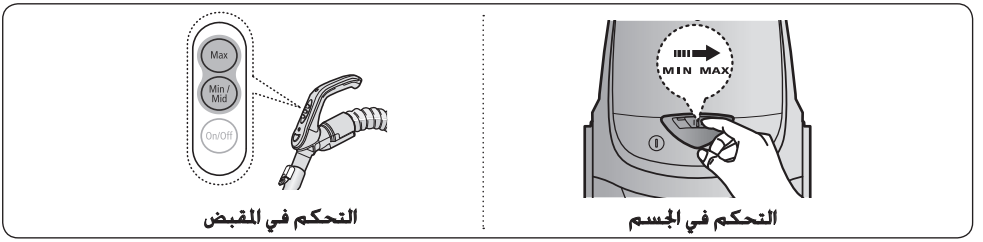


التحكم في الجسم | التحكم في المقبض

• إذا تحول مؤشر فحص المرشح إلى اللون الأحمر وكان المدخل على مسافة ١٠ سم من أرض مسطحة، قم بتنظيف حاوية الأتربة.

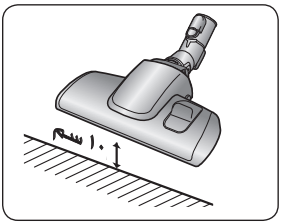


• في حالة استمرار تناقص قوة الشفط بشكل ملحوظ، يُرجى تنظيف حاوية الأتربة.

# صيانة الأدوات والمرشحات

## تغيير كيس الأتربة

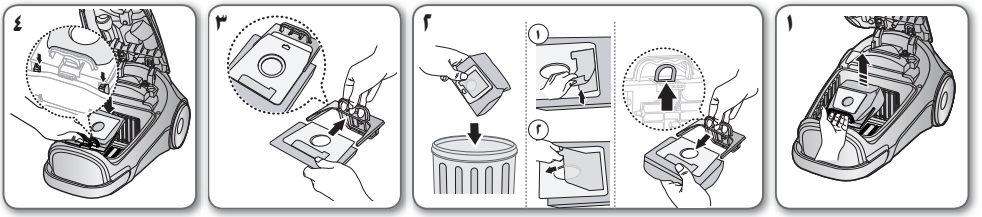


**اختياري**

- **بالنسبة للكيس المصنوع من القماش**

بعد الاستخدام، إذا كان الكيس المصنوع من القماش ممتلئ بالأتربة، قم بتنظيفه واستخدامه مرة أخرى.

يمكن شراء أكياس الأتربة من التاجر التي قمت بشراء هذه المكنسة الكهربائية منها. كما يمكن استخدام الأكياس الورقية كما ترغب (الكيس الورقي : VP-90)

## تنظيف مدخل المرشح

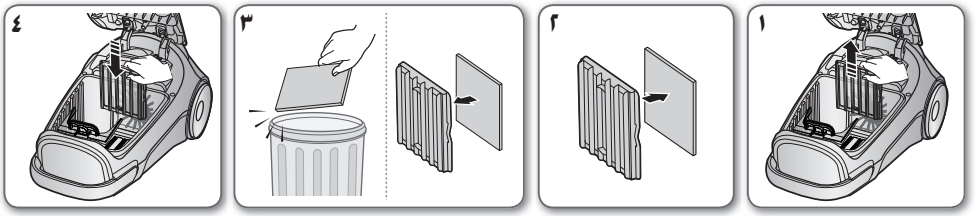


## تنظيف مخرج المرشح

١. اضغط على جزء الإطار الثابت الموجود بالجزء الخلفي من الجسم الرئيسي لفكه.

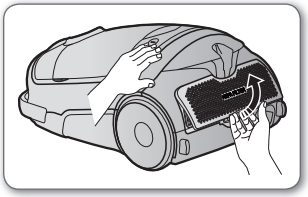

# صيانة الأدوات والمرشحات

٢. اسحب المرشح باستخدام المقبض. وقم بتنظيف المرشح.

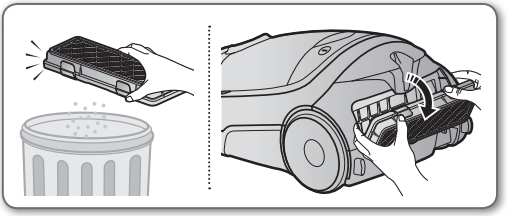

٣. أدخل المرشح في الجسم الرئيسي حتى تسمع صوت "نقرة".

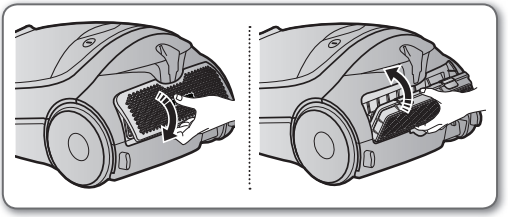

## تنظيف مرشح السيكلون (اختياري)

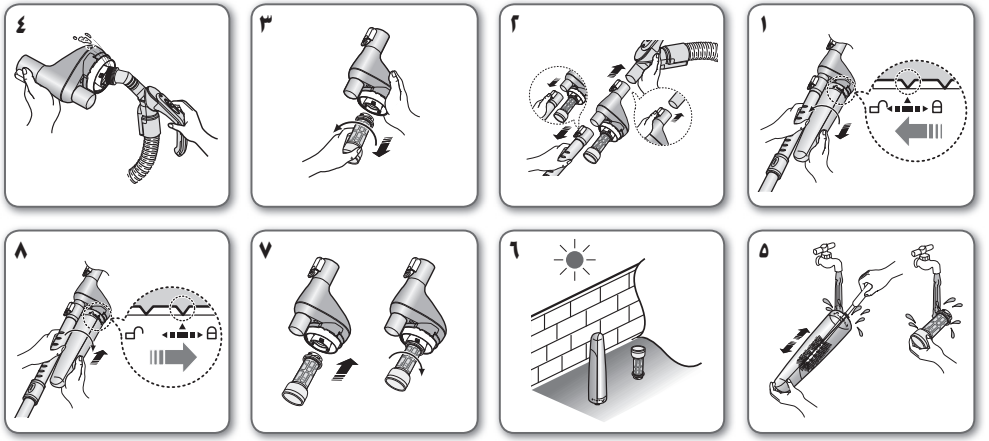


• استخدم «مرشح السيكلون» للحصول على أفضل كفاءة.

# صيانة الأدوات والمرشحات

## تغيير البطارية (اختياري)

١. إذا كانت المكنسة الكهربائية لا تعمل، استبدل البطاريات. وفي حالة استمرار المشكلة، الرجاء الاتصال بوكيلنا المعتمد.

٢. استخدم بطاريتان بحجم AA.

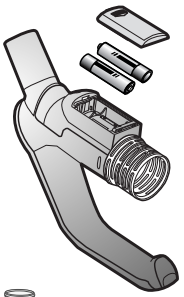

نوع البطارية : حجم AA

**تحذير**

١. لا تقم بفك البطاريات أو إعادة شحنها مطلقًا.
٢. لا تقم بتسخين البطاريات أو رميها في النار مطلقًا.
٣. لا تعكس الأقطاب (+) و(-)
٤. تخلص من البطاريات بشكل سليم.

# استكشاف الأخطاء وإصلاحها

| المشكلة | الحل |
|---|---|
| المحرك لا يعمل | • افحص كل من الكبل والقابس والمقبس.<br>• اتركه حتى يبرد. |
| قوة الشفط تقل تدريجيًا | • افحص للتأكد من وجود انسداد وقم بإزالته. |
| لا يدخل السلك بشكل كامل | • اسحب السلك للخارج بمسافة ٢-٣ متر وادفع زر إدخال السلك لأسفل. |
| المكنسة الكهربائية لا تلتقط الأتربة | • افحص الخرطوم واستبدله إذا لزم الأمر. |
| تناقص قوة الشفط أو انخفاضها | • يرجى فحص المرشح وإذا لزم الأمر قم بتنظيفه كما هو موضح بالإرشادات. وإذا لم تكن المرشحات بحالة جيدة. فاستبدلها بأخرى جديدة. |

لأي أسئله لها علاقه بمنتجات سَامْسُوخْ يُرجى الإتصال بمركز خدمة عملاء شركة سَامْسُوخ

| Web Site | Customer Care Center ☎ | Country |
|---|---|---|
| www.samsung.com | 800-SAMSUNG(726-7864) | U.A.E |
| www.samsung.com | 8000-4726 | BAHRAIN |